


Double fly reel



This reel is in lovely condition and appears to have no mechanical issues. Firstly remove the screw in the centre of the drag knob.

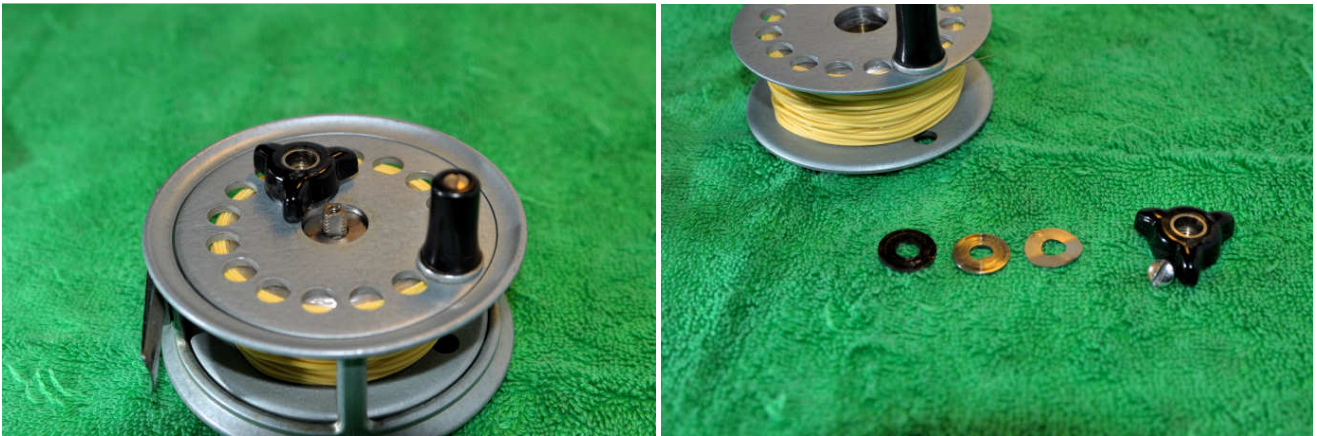

Unscrew the drag knob and then remove the spool. Note that there are three washers in the spool. They are laid out left to right = bottom to top (the fibre washer is on the bottom, curved metal washer on the top).



Remove the click wheel assembly from the spool-it simply lifts out. The anti reverse dog can be removed from the click wheel.

Give everything a thorough clean before reassembly.



Lightly grease the fibre washer at the base of the spool shaft with drag grease. Add oil to the spool shaft. Note that the reel can be configured to be other left or right hand retrieve, I assume V is left and H is right in Swedish. If you wish to retrieve with the left hand move the spring on the reel body to V or L-with the right then leave it at H or R.

Add a very light coat of grease to the ears on the anti reverse dog and replace it on the click wheel. Put some oil on the shaft for the click wheel and then replace it in the spool.



Similarly, if you wish to have right hand retrieve then leave the a/r dog at this position (H or R), if you wish to change to left hand retrieve then put it in the VL position.

Replace the spool in the frame and replace the three washers and the drag knob-you can lightly grease the fibre washer with drag grease. Replace the screw in the centre of the drag knob and then add a couple of drops of oil to the handle to finish off.

© Tim Parratt 2010